INSTRUCTIONS FOR USE: RECHARGEABLE VACUUM WAVE STIMULATOR

Take it easy



CARE

Before the first use and after each application, rinse the toy under a warm stream of water, drying it with a paper towel. Treat the stimulator with a special Love Protection toy cleaner with antiseptic properties for additional care.

STORAGE

Keep the stimulator in a satin bag, out of the reach of children. Remaining in the bag, the toy is protected from direct sunlight, dust, and is not subject to external damage in the form of scratches and device rubbing.







USAGE

Before the first use, charge the toy within an hour using a USB charger (included). The rechargeable device with plug-in charger has a protective membrane that prevents liquid from entering the toy.



The device is switched on and off by pressing the power button for two seconds.

Short button presses switch the stimulation modes.

